



Fresh Air Control - app

# MotorController and remote control



## Application

- for daily comfort ventilation
- for controlling ±24V DC standard window actuators and window actuators with MotorLink<sup>®</sup>
- up to 2 comfort ventilation groups with a max total power consumption of 6A
- may be combined with external temperature and time automated BMS
- wireless operation opening/stop/closing of windows via remote control (WCA 100) or app (Fresh Air Control)

MotorController for controlling ±24V DC standard actuators and MotorLink<sup>®</sup> actuators for daily comfort ventilation. It can also control locking actuators. The number of actuators that may be connected to the motor line depends on the type of actuator – see the table, "Maximum number of actuators per MotorController" for type/number.

#### Description

#### MotorController - WCC 106 A

The MotorController controls (opens/closes) the window actuators based on a signal from a remote control (WCA 100), the app "Fresh Air Control", connected comfort keypads or the connected component(s) e.g. room sensors and weather sensors.

Connecting a room thermostat to the MotorController, gives the option for incremental opening / closing of the windows when the temperature setpoint is exceeded. Up to 10 MotorControllers can be connected as part of a larger solution and may be connected to the same weather station.

#### Remote control - WCA 100

The remote control offers easy control of connected window actuators (open/stop/close).

The remote control can be paired to only one MotorController.

#### App - Fresh Air Control

From the app "Fresh Air Control" you can control the windows the same way as with the remote control - open/stop/close. For an easy overview in the app can the windows / window grups be named.

The app can connect to several MotorControllers.

#### **Prioritised inputs**

The actuators may be overridden via three prioritised inputs. All switches must be potential free.

- common CLOSE ALL/safety (rain) function (highest priority)
- hand operation of the motor line
- automated control of the motor line (lowest priority)

#### Power supply for external units

When connecting sensors the auxiliary power from the built-in 24V DC 500mA power supply can be used

### **Specifications**


- up to 2 motor groups with up to total max power consumption of 6A
- Max output voltage 24VDC at 230VAC
- simple and quick installation
- up to 10 MotorControllers may be linked
- rain/wind sensors can be connected
- roomthermostat can be connected
- 3 prioritised inputs
- wireless control via remote control WCA 100
- mobile management via app "Fresh Air Control" (requires MotorController version 02 or higher)

The MotorController may either be mounted horizontally or vertically on a wall.

The remote control WCA 100 has an operation range up too 50m outside and 10m inside. Physical barriers such as walls, cabinets etc. will reduce the operation range.

**Configuration** The MotorController has 8 DIP switches for configuration. The factory setting for all the DIP switches is OFF.


DIP-switch				
Switch	Description	ON / OFF function		
1	Maintained action	ON: the actuators open/close completely when the comfort keypad is pressed. OFF: the actuators run for as long as the comfort keypad is being pressed.		
2	Rain delay	ON: the rain signal must be active min. 60 sec. before the actuators begin to close. OFF: the actuators begin to close as soon as the rain signal is activated.		
3	Extended hand timer	<ul><li>ON: after manuel override the actuators are locked for 2 hours (except rain/safety signals).</li><li>OFF: after manuel override the actuators are locked for 30min (except rain/safety signals).</li></ul>		
4	Surveillance	<ul><li>ON: activate cable survaillance on input X10.1 (rain). The Input must be terminated with 10k resistor.</li><li>OFF: no cable surveillance.</li></ul>		
5	MotorLink®	ON: MotorLink <sup>®</sup> motors are connected to the MotorController. OFF: ±24V standard motors are connected to the MotorController.		
6	100% speed	<ul> <li>ON: actuators run with 100% speed, when run manually. (requires MotorLink motors<sup>®</sup>)</li> <li>OFF: actuators run with 75% speed, when run manually.</li> </ul>		
7	Accumulated step	<ul> <li>ON: actuators open/close in steps, when a thermostat e.g. WLA 110 is connected to the MotorController and the setpoint is exceeded.</li> <li>Opening step: 5% for every 5min Closing step: 10% for every 10min</li> <li>OFF: actuators open/close completely when a thermostat e.g. WLA 110 is connected to the MotorController and the setpoint is exceeded</li> </ul>		
8	Motor line 2, motors run independently	<ul> <li>ON: the actuators on motor line 2 are controlled individually via input X2, X3, X4 and X5. Up to 4 actuators can be connected to motor line 2 and all actuators must be single / -1 actuators.</li> <li>The actuator's serial number determines, which input controls which actuator, the serial number is automatically identified by the firmware in the MotorController.</li> <li>X2 - controls the actuator with the highest serial number</li> <li>X3 - controls the actuator with the second-highest serial number</li> <li>X4 - controls the actuator with the second-lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X5 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>X6 - controls the actuator with the lowest serial number</li> <li>Actuators on motor line 1 are controlled together via input X10. Up to 4 actuators can be connected to motor line 1. All actuators on motor line 1 must be of the same type, incl. team size and cha</li></ul>		

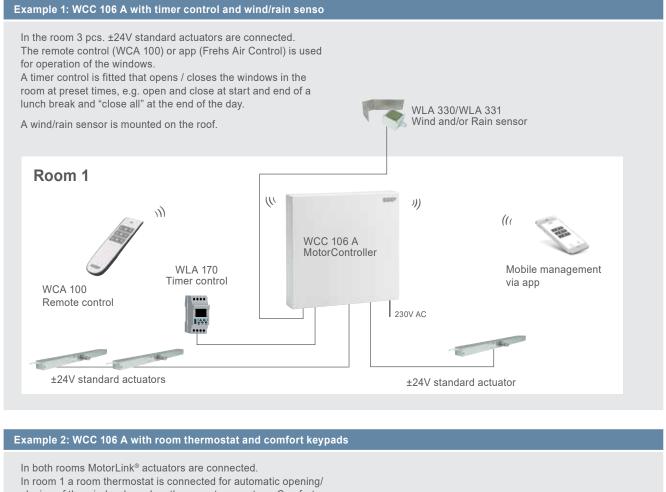

closing of the window based on the room temperature. Comfort keypads are installed for individual operation of the actuators installed in room 1.

The app is used for individual operations of the actuators in room 2, but can also be used to operate the actuators in room 1.

A wind/rain sensor is mounted on the roof.

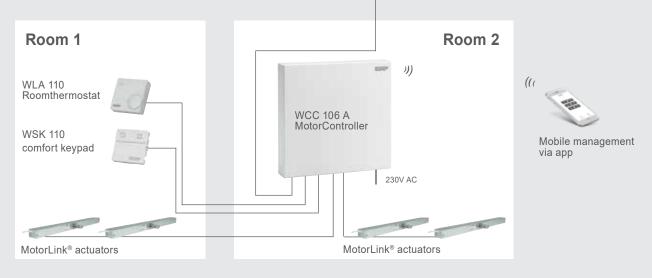

WLA 330

Wind and Rain sensor

Technical specifications - WCC 106 A				
Output current	6A incl. load on X7 (max 0.5A)			
Motor groups / Motor lines	Up to 2 motor groups with each 1 motor line. Either ±24V standard actuators or MotorLink <sup>®</sup> actuators can be connected to the MotorController			
Primary voltage	100-240 VAC 1.7A 50/60Hz			
Actuator secondary voltage	Nominal voltage Open circuit voltage at 230V AC (no load) Ripple at max load	24V DC (±15%) 24V DC @ 20°C 200mVp-p		
Power consumption	Idling < 0.5W Max load 150W			
Leakage current	max 0.75mA @ 240VAC			
Inrush current on primary side	side60A < 5ms v. 230VMax. 3 x WCC 106 A per 10A power supply group. Circuit breaker "C" characteristic.			
AUX	24V DC, 500mA			
<b>Operating conditions</b> -5°C - +45°C, for indoor installation, the controller may not be covered		er may not be covered		
Switch-on duration	ED 40% (4 min. per 10 min.)			
Connection cable	Actuators Flexible max 6mm² / solid max 10mm², max 2V voltage drop.			
	Other components Min 0.2mm² / max 1.5mm²			
Арр	Control via app requires MotorController version 02 or higher			
Size	215 x 206 x 37mm (W x H x D)			
Material	Plastic			
Colour White (RAL 9016)				
Weight	0.92kg			
IP rating IP20				
Safety class	I (with PE)			
Delivery includes	Standard version: MotorController with 1.2 m cable with Schuko plug           UK version: MotorController with 1.2 m cable with Schuko plug with UK network adapter			
Note	We reserve the right to make technical changes			

Technical specifications - WCA 100				
Primary voltage	2 x AAA alkaline batteries (1.5V)			
Operation range between MotorController and remote control	- Outside: up to 50m in radius - Inside: up to 10m in radius Physical barriers such as walls, cabinets etc. will reduce the range.			
Size	41 x 18 x 144mm (B x H x L)			
Weight	61g (incl. batteries)			
Delivery includes	Remote control with 2 x AAA Alkaline batteries			
Note	We reserve the right to make technical changes			

**Max number of actuators per MotorController** The following table shows the maximum number of actuators, based on actuator type (±24V standard or MotorLink<sup>®</sup>) that can be connected to the MotorController. Total power consumption for all connected actuators may not exceed 6A.

	Per Motor line		Per MotorController	
Actuator type	±24V actuators	MotorLink <sup>®</sup> actuators	±24V actuators	MotorLink <sup>®</sup> actuators (2 motor lines)
WMD 820-1	6	4	6	6
WMD 820-2	6	2	6	4
WMD 820-3	6	3	6	6
WMD 820-4	4	4	4	4
WMS 306 / 309-1	6	4	6	6
WMS 306 / 309-2	6	2	6	4
WMS 306 / 309-3	6	3	6	6
WMS 306 / 309-4	4	4	4	4
WMS 409 xxxx 01	3	0	3	0
WMS 409-1	3	3	3	3
WMS 409-2	2	2	2	2
WMS 409-3	3	3	3	3
WMU 831 / 851-1	6	4	6	6
WMU 831 / 851-2	6	2	6	4
WMU 831 / 851-3	6	3	6	6
WMU 831 / 851-4	4	4	4	4
WMU 836-1	4	4	4	4
WMU 836-2	4	2	4	4
WMU 836-3	3	3	3	3
WMU 836-4	4	4	4	4
WMU 852-1	3	3	3	3
WMU 852-2	2	2	2	2
WMU 852-3	3	3	3	3
WMU 861-1	3	3	4	4
WMU 861-2	2	2	4	4
WMU 861-3	3	3	3	3
WMU 842 / 862 / 882-1	2	2	3	3
WMU 842 / 862 / 882-2	2	2	2	2
WMU 842 / 862 / 882-3	2	2	3	3
WMU 863 / 883-1	2	2	2	2
WMU 863 / 883-2	2	2	2	2
WMU 864 / 884-1	1	1	1	1
WMU 885 / 895-1	1	1	1	1
WMX 503 / 504 / 523 / 526-1	10	4	10	8
WMX 503 / 504 / 523 / 526-2	10	2	10	4
WMX 503 / 504 / 523 / 526-3	9	3	9	6
WMX 503 / 504 / 523 / 526-4	8	4	8	8
Continued on the next page				

## WCC 106 A / WCA 100 MotorController and remote control

Continued				
WMX 803 / 804 / 813 / 814 / 823 / 826-1	6	4	6	6
WMX 803 / 804 / 813 / 814 / 823 / 826-2	6	2	6	4
WMX 803 / 804 / 813 / 814 / 823 / 826-3	6	3	6	6
WMX 803 / 804 / 813 / 814 / 823 / 826-4	4	4	4	4
WML 820 / 825	6	0	6	0
WML 860-1	6	4	6	6
WML 860-2	6	2	6	4
WML 860-3	6	3	6	6
WML 860-4	4	4	4	4
WMB 801 / 802	Actuators with a total max of 4A can be connected to the locking actuator			
WMB 811 / 812 / 815 / 816 / 817 / 818*	6	2	6	2

\* When having two locking actuators on one motor line use: 1 x WMB 811 and 1 x WMB 812, 1 x WMB 815 and 1 x WMB 816 or 1 x WMB 817 and 1 x WMB 818

Variants	Item number
MotorController 6A	WCC 106 A 0102*
MotorController 6A, UK version	WCC 106 A 0402*
Remote control for WCC 10x A	WCA 100 0101

Accessories	ltem number
Comfort keypad, for fitting	WSK 100 1161
Comfort keypad, 1 window or 1 window group	WSK 110 0A0B
Comfort keypad, 2 windows or 2 window groups	WSK 120 0A0B 0A0B
Comfort keypad, for fitting (CH version)	WSK 300
Room thermostat: temperature	WLA 110
Wind/rain sensor	WLA 330
Rain sensor	WLA 331
Mobile phone app - can be downloaded from Google Play or App Store	"Fresh Air Control"

\*02 enables control via app